





AUBO Palletizer Customization Guide

Introduction	1
Instructions	2
Main Interface Title Change	2
Box Logo Change	3
Version Logo Change	4

Introduction

AUBO Palletizer allows the customer to change the title on the main interface, customize the box logos and the version logos that are displayed inside the application. See the following pictures and the three customizable components labeled in red.

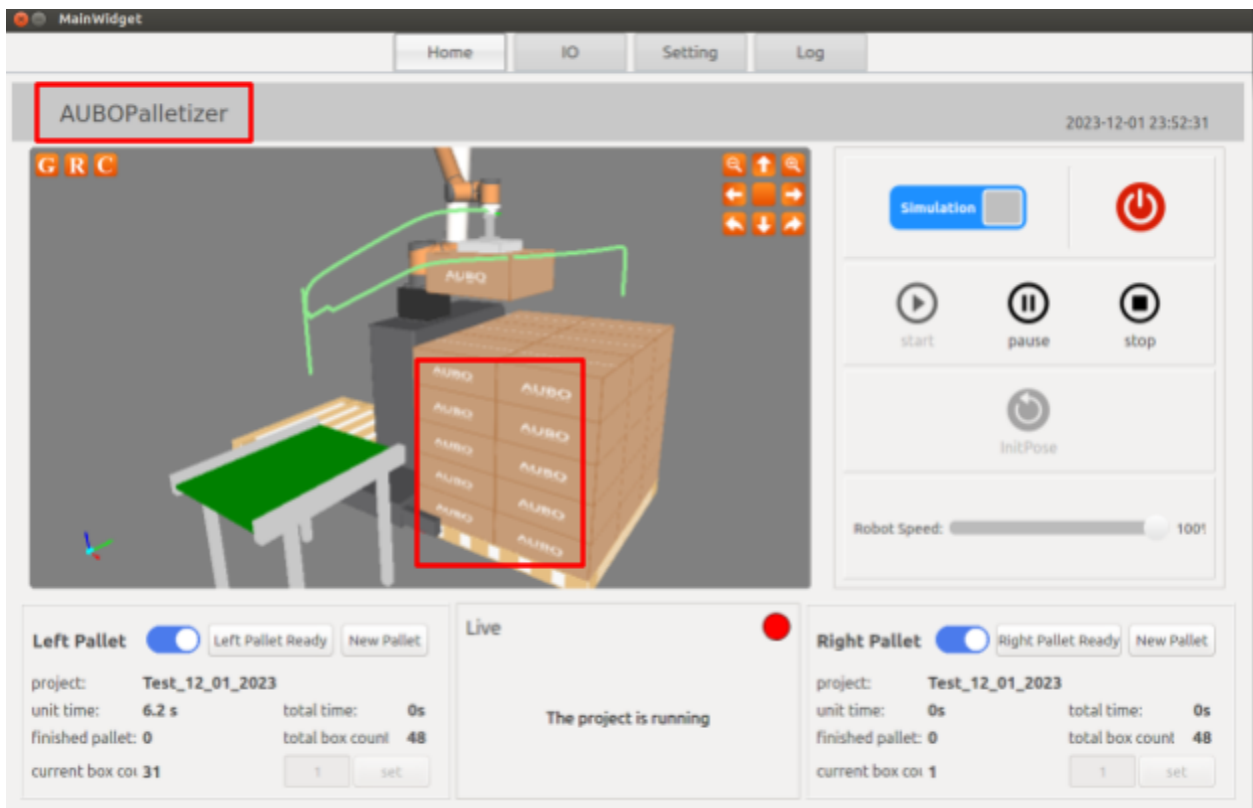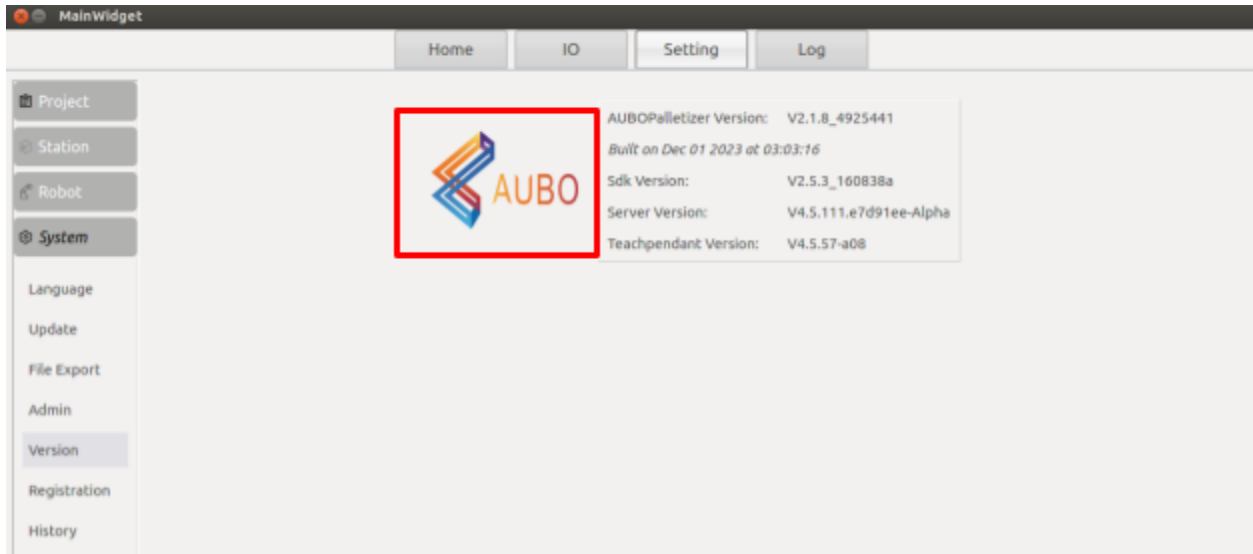


Instructions

Main Interface Title Change


1. Please follow the directory: (Desktop) Files -> AUBOPallet -> config -> oem.conf



2. Double click into oem.conf, and change the Title to your choice. Then save and exit the file.

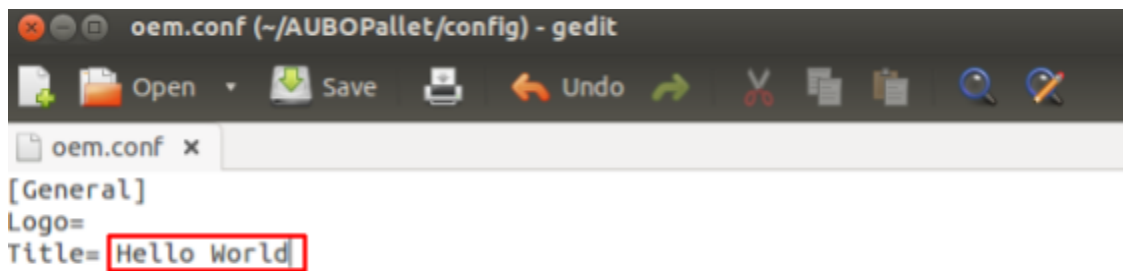


3. Then, paste it to the correct location mentioned above and restart the AUBOPalletizer Application. (You do not need to reboot the operating system)

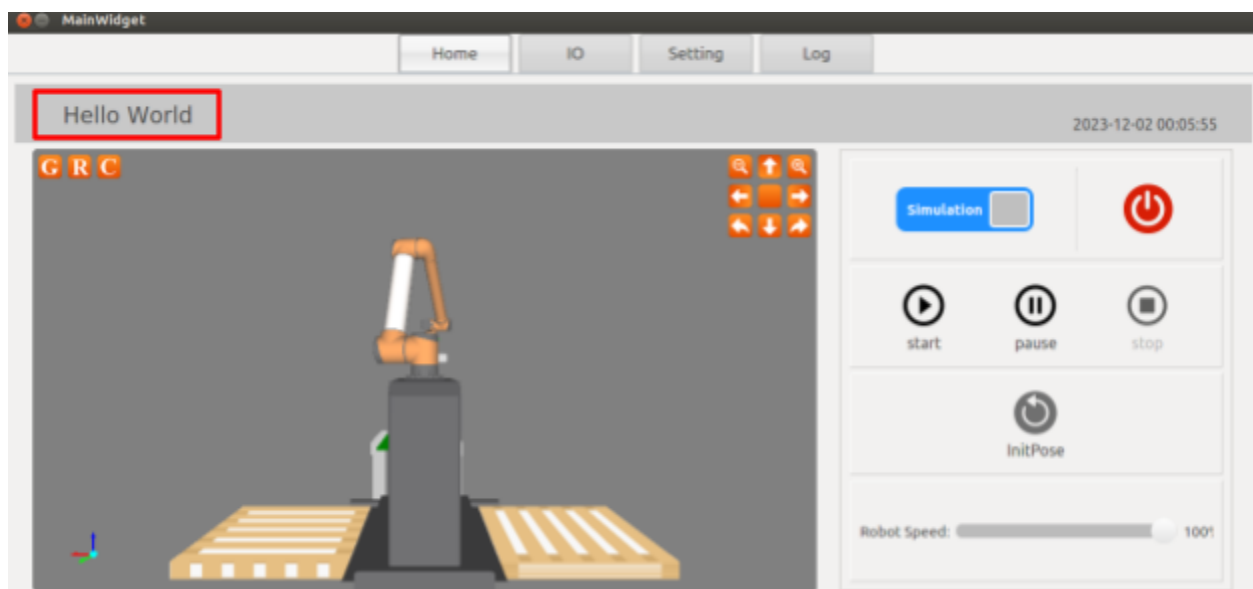


Box Logo Change

1. Please follow the directory: (Desktop) Files -> AUBOPallet -> resource -> image -> boxlogo

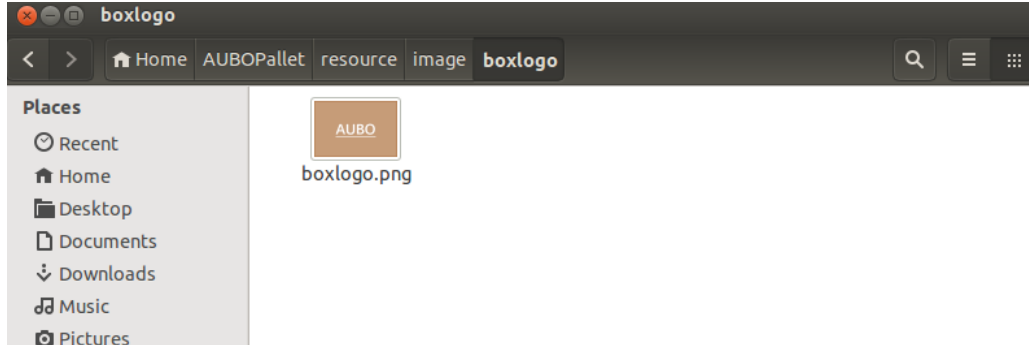


2. Save your company logo as .png file, rename it to boxlogo, and replace the default logo in this folder. It is recommended to save the past logos that you have used somewhere.

The logo used in this example is:

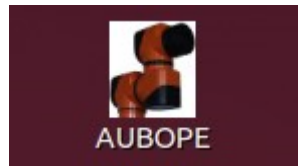


3. Then, paste it to the correct location mentioned above and restart the AUBOPalletizer Application. (You do not need to reboot the operating system)



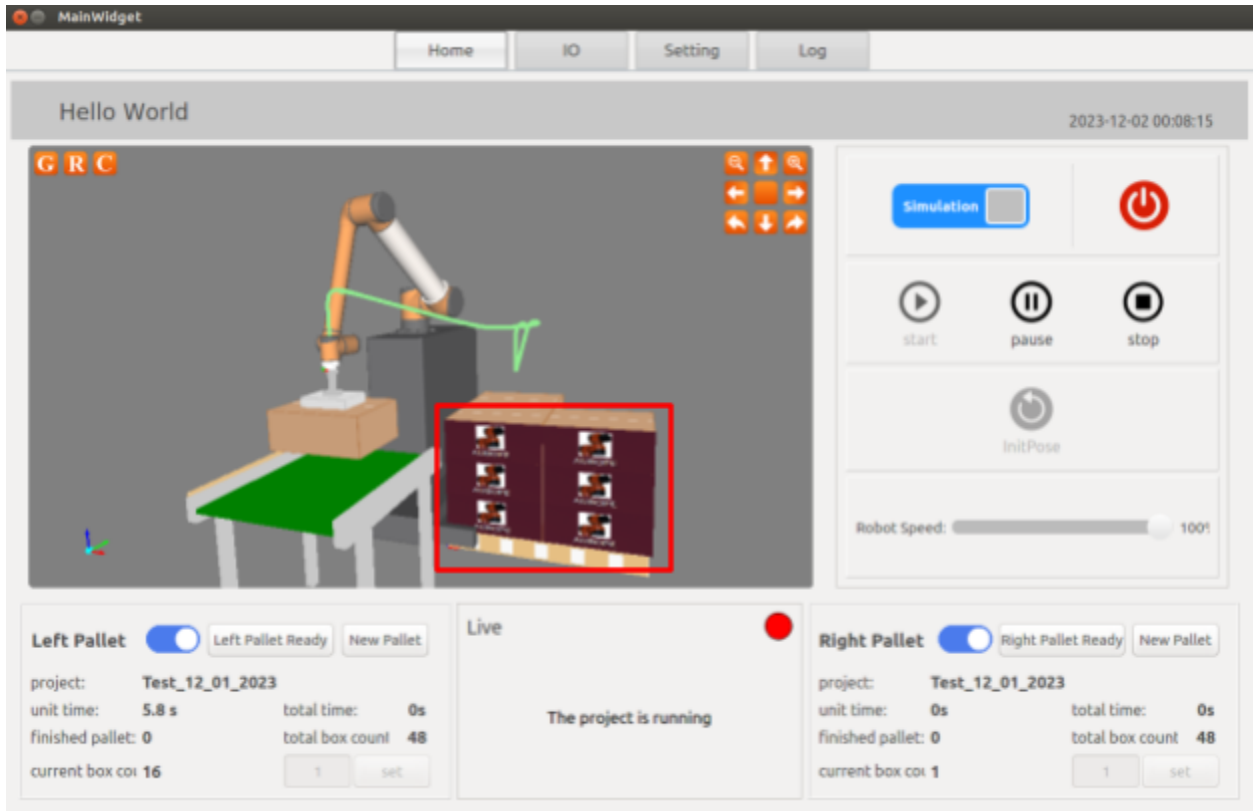


System Version Logo Change


1. Please follow the directory: (Desktop) Files -> AUBOPallet -> resource -> image:

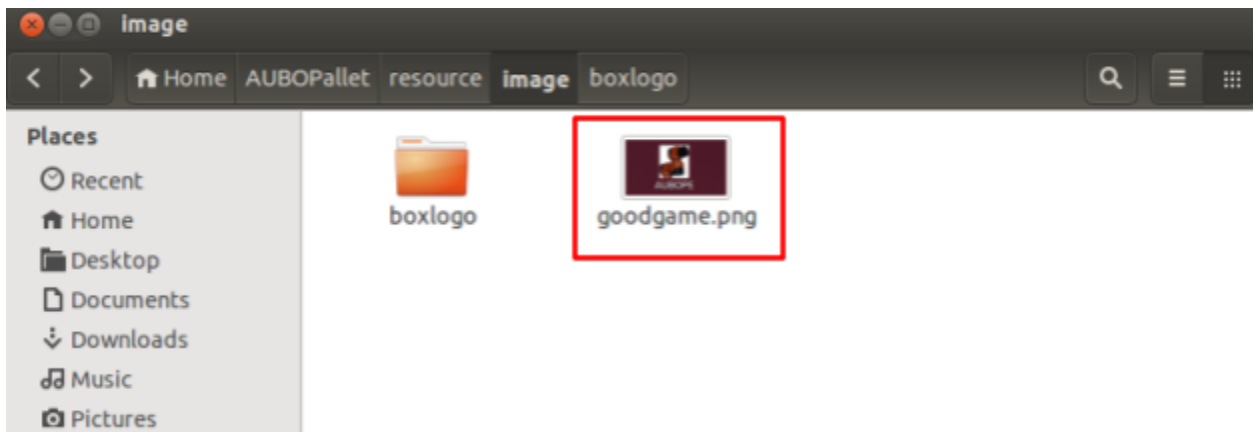


2. Then follow the directory below to change the oem.config file: (Desktop) Files -> AUBOPallet -> config -> oem.conf

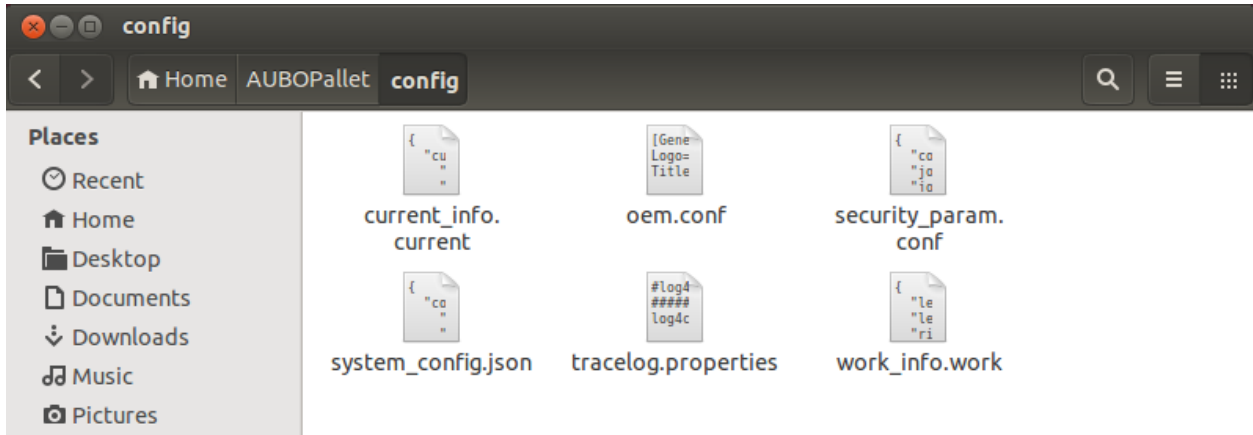


3. Add the name of the logo file to the oem.conf and then save and exit the file:

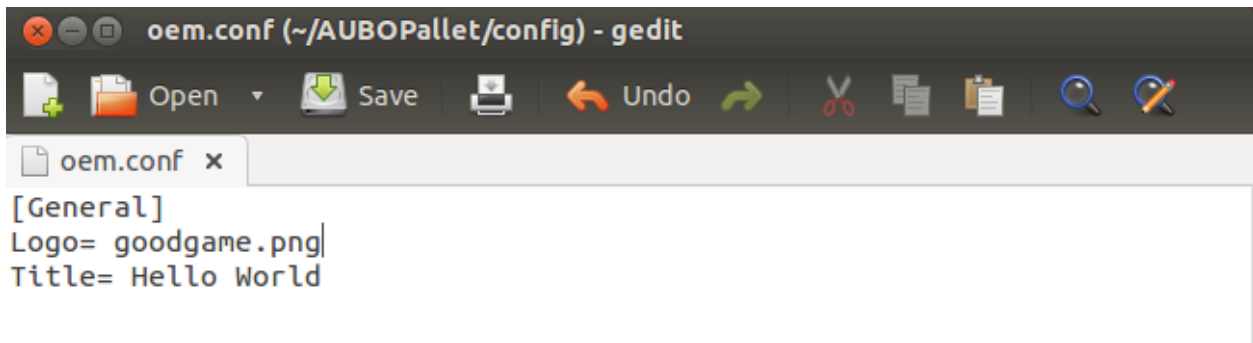

4. Then, paste it to the correct location mentioned above and restart the AUBOPalletizer Application. (You do not need to reboot the operating system)

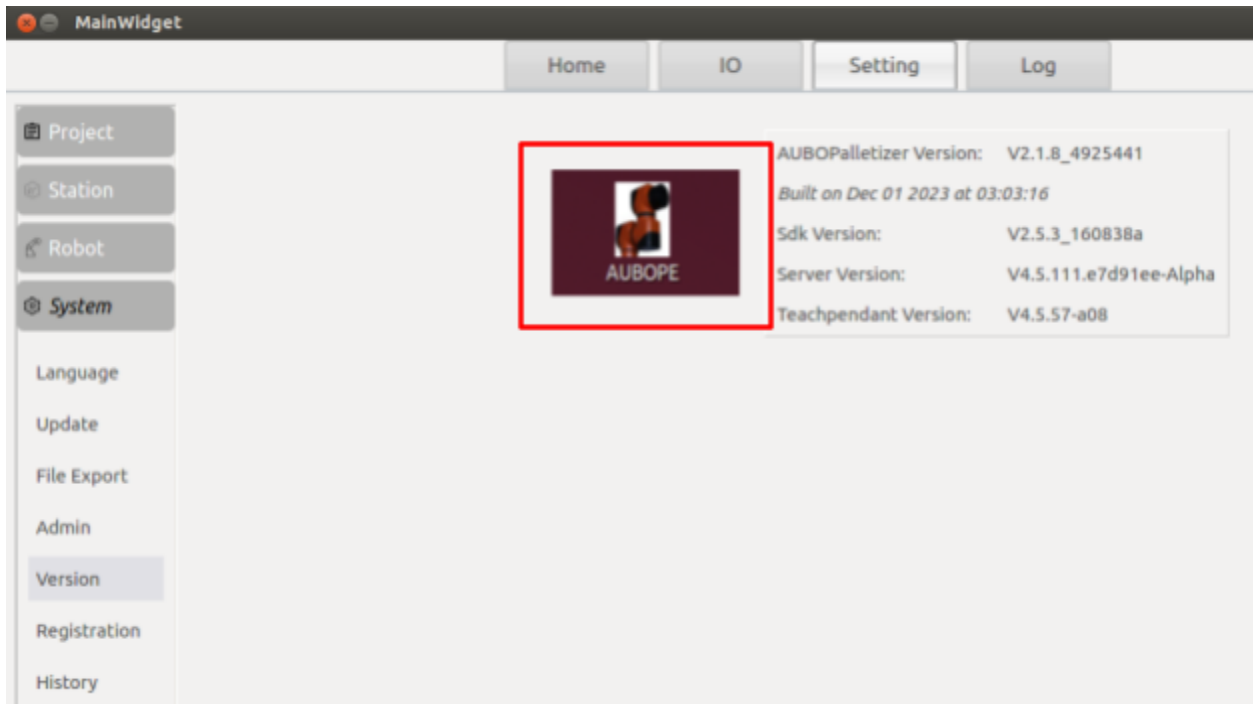

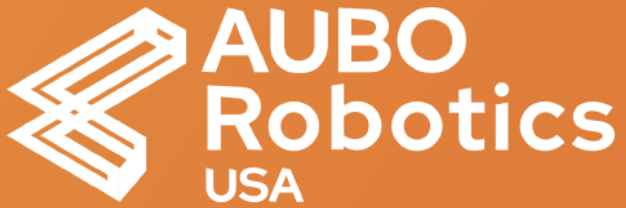

AUBO Robotics USA

Headquarters Address: 11701 Metro Airport Center Dr, Romulus, MI 48174

Tel: +1 833-282-6276

E-mail: sales@aubo-usa.com